

Key Functions

* Network configuration via the L-Home APP, with support for setting RGB or RGBW types

16 Modes

Short press: switch

Long press: adjust current mode speed

Short press:

Turn RGB on/off

Long press:

Adjust the brightness value of RGB

Short press:

All on/All off

16 Modes (Switch via the " " icon)

1. 3 color jumping
2. 7 color jumping
3. White strobe
4. 7 color strobe
5. Red green gradient
6. Red blue gradient
7. Green blue gradient
8. Red yellow gradient
9. Blue purple gradient
10. Green yellow gradient
11. Blue cyan gradient
12. Red purple gradient
13. Blue white gradient
14. Yellow purple cyan gradient
15. 3 color gradient
16. Full color gradient



4 Zone Keys

Short press: Turn on, select/deselect the current zone

Long press: Turn on/off the current zone

Short press: Turn W on/off Long press: Adjust the brightness value of W

When the RGB type is set, the button is invalid

Touch Color Ring (RGB)

 
Touch Slider (RGB Brightness)

Four Scene Keys

Short press: Execute the scene Long press: Save the current scene [This function needs to be enabled in the APP]

Wireless bluetooth panel + DMX panel and drivers support diverse lighting applications.

D



APP

WP02

DMX Driver(DMX/CCT/RGB/RGBW/RGBW)

Lamp